



# ROCKETPEN EXAM

By SmartPens4U

## Quick Start Guide



Content of box

- RocketPen Exam
- USB Type-C cable
- Earphones
- Quick Start Guide

Version: A1.13E

**SmartPens4U**

Thank you for buying RocketPen Exam from SmartPens4U.

RocketPen Exam is designed to be a reading assistant, and our goal is to make you an independent reader. Whether you need to read exam questions, do your homework, or simply want to read your favorite novel, we hope reading becomes less challenging and more enjoyable for you.


RocketPen Exam is a stand-alone and self-contained product and works without being connected to any other device or network.

For technical specification and further information regarding additional features, supported languages, upgradability, battery, etc., please see:

[www.smartpens4u.com](http://www.smartpens4u.com)

Copyright© SmartPens4U Ltd.

# RocketPen Parts

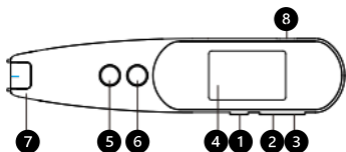

1 – Power On/Off

Press 3 seconds to power device on or off. Press briefly to return from power-saving mode.

2 – Volume down button

3 – Volume up button

4 – Screen

The device's display touch screen


5 – Read aloud button

6 – Back button

7 – Scan Trigger

Automatically activated when the pen is in contact with a paper. Scan light is turned on

8 – Type-C USB connector  
Used for charging, upgrading and earphones




9 – Speaker

Used when text is read aloud. Muted when earphones are connected.


## Getting started

Press and hold the power button for about 3 seconds. When the RocketPen Exam logo appears, release the button. After that, a logo animation should run, followed by Interface Language selection window:

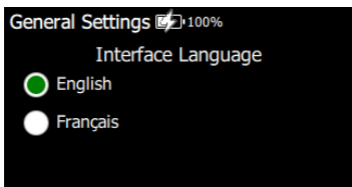


(Note: If the display does not light up, charge the device for about 30 minutes).

After selecting the required Interface Language, the main menu appears:

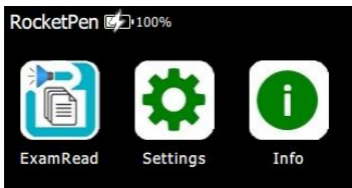


# ExamRead Application

1. Press the ExamRead application. A Scanning Language selection window appears:

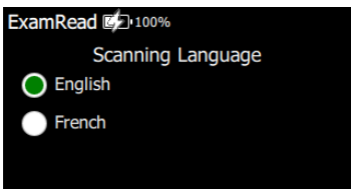


2. Once a scanning language was selected, “Ready to Scan in...” screen appears:

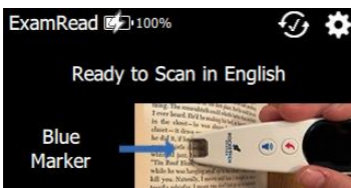

3. There are 2 scanning modes:

- a. Continuous scanning
- b. Single line scanning.


The default is *Continuous scanning*. Scan the lines one after another. By pressing the speaker button, the entire scanned text will be read aloud. Each word will be highlighted as it is spoken. To activate single line


scanning mode, press the  icon.


To reactivate continuous scanning mode, press the


 icon.


ExamRead Settings 


Scanning Language :  
View a list of available scanning languages. Use this option to change the current selection.

Voice Settings :  
Use this option to modify the volume and reading speed default, and to select a different voice.

General Settings :  
The *General Settings* includes the following general Pen settings:

Brightness :  
Use this option to adjust the brightness of the display.

Screen Standby Time :  
Use this option to change the default standby time.

Auto Shut-off Time :  
Use this option to change the default shut-off time.

Left-Handed User 

Use this option to switch to left-handed user.

Scan Right-to-Left 

Use this option to switch to right-to-left scanning.

Interface Language 

View the list of available interface languages and change the default language.

Factory Reset 

Use this option to reset all preferences.

RocketPen Exam is the trademark or registered trademark of SmartPens4U Ltd.